




ACCUBREW


QUALITY • CONSISTENCY • CONFIDENCE

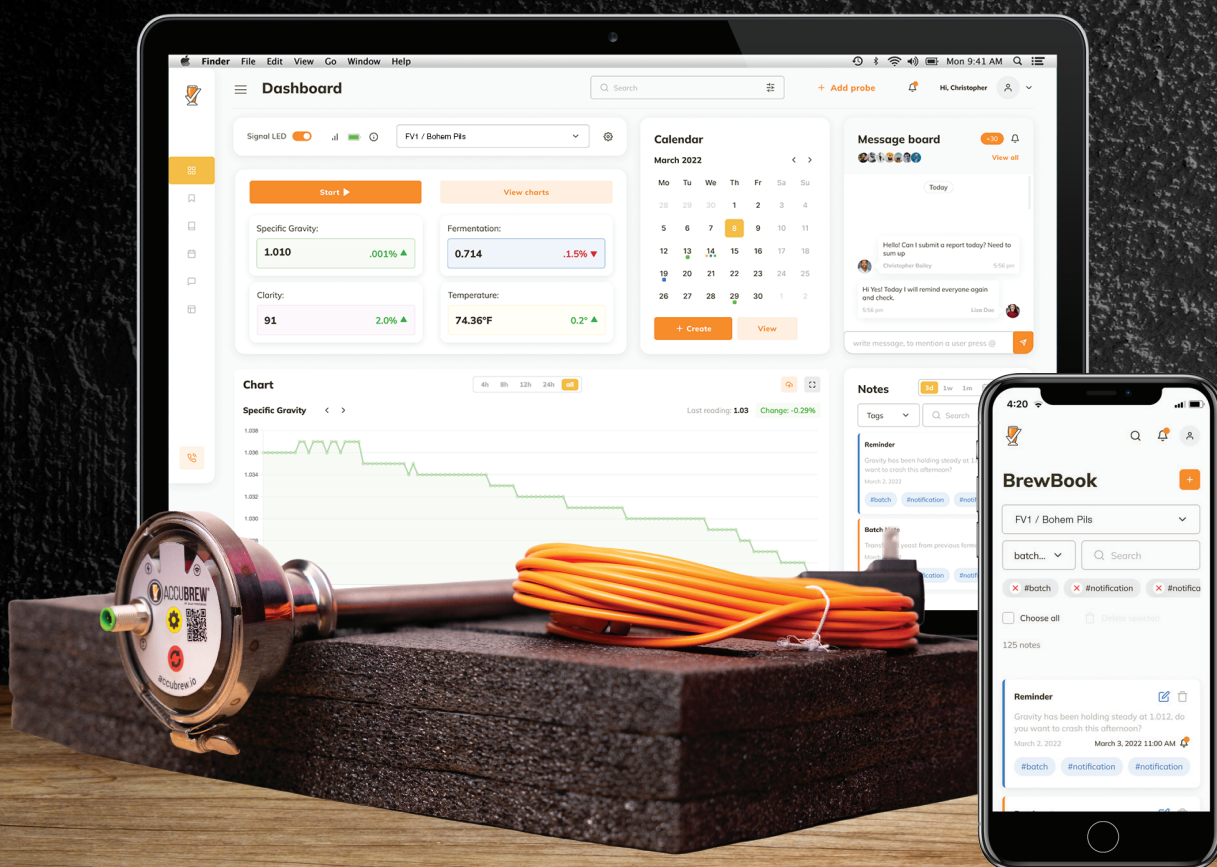


QUICK START GUIDE



Power & Connection

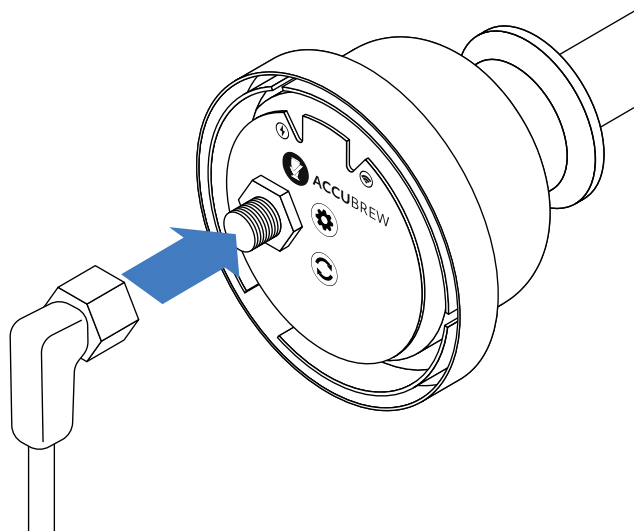


Connect the power cord to your probe and plug power adapter into a 110v wall outlet.

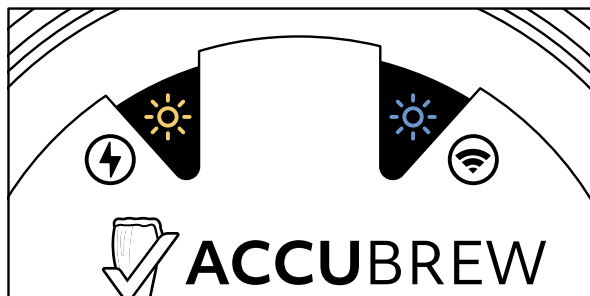

1. The left LED glows yellow when charging and cyan when fully charged.

2. The right LED flashes blue when the probe is ready to be claimed.

3. If the right LED is not flashing blue, press and hold the yellow button (A) until the LED does flash blue.

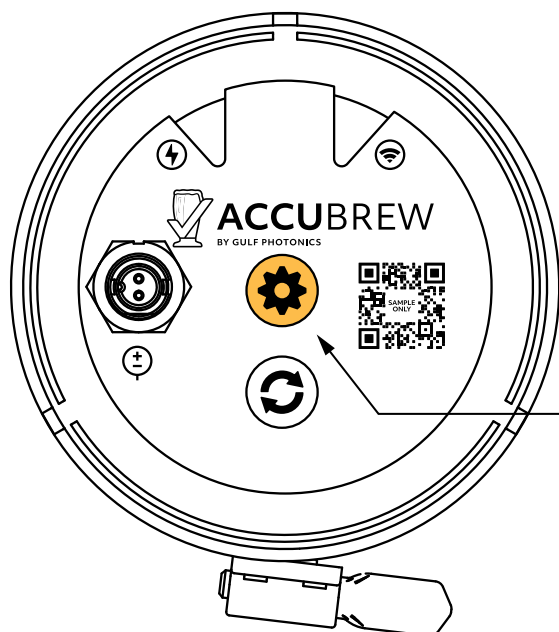


4. The probe includes a backup battery, but should remain plugged in during a run.

The AccuBrew power adapter includes a Type A plug and accepts 110-220VAC at 50-60 Hz.

Enable WiFi on your mobile device and have your 2.4 GHz WiFi password available.

If you have any questions, call (727) 685-9860 or email sales@accubrew.io.

Application Installation

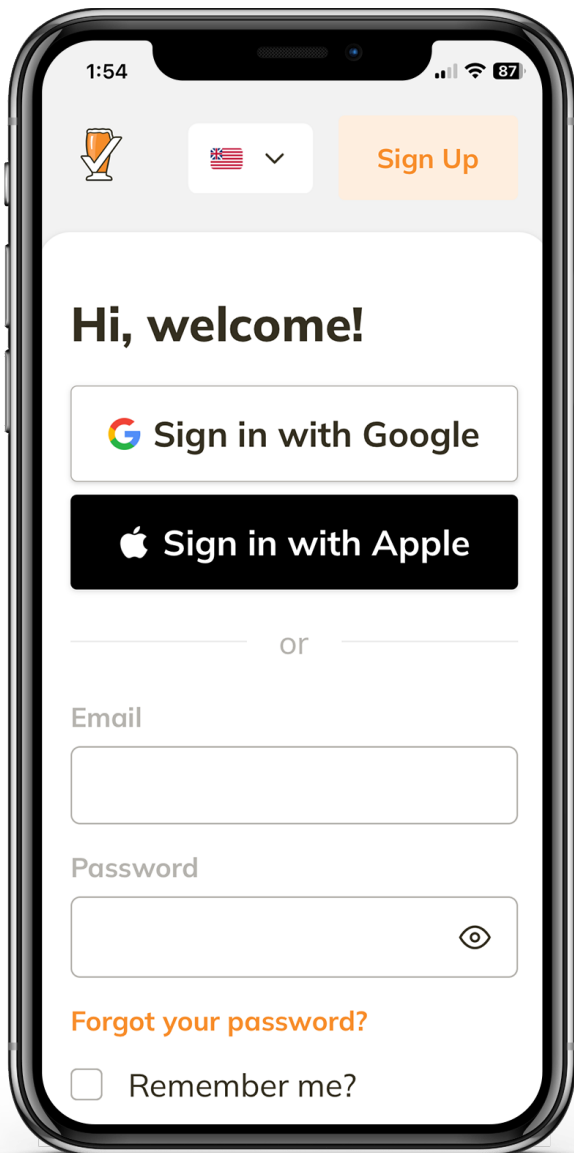


Install the AccuBrew mobile app and create your account, or link your Google / Apple account.

1. Use the camera on your mobile device to scan the QR code below, OR visit the App Store (iOS) or Google Play (Android) and search for "AccuBrew".
2. Download and install when prompted.
3. Create your account using email and password, then tap **Sign Up**.




Claiming Your Probes

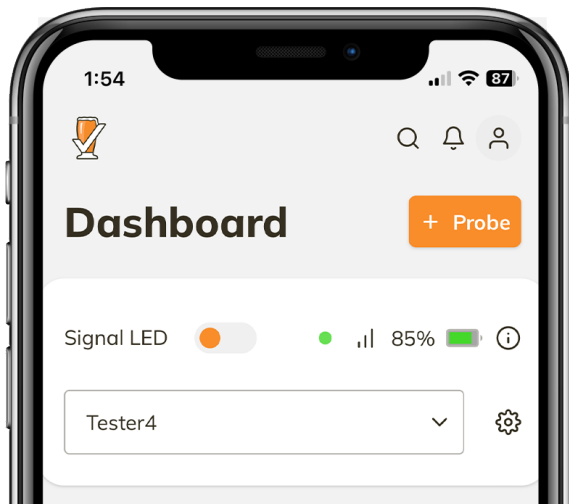


Use the front of your probe(s) and the AccuBrew app to pair and claim each probe.

1. Tap the, **+Probe**, button and use the viewfinder to scan the QR code on the front of the probe.
2. Tap **Connect**.
3. Tap **Select AP** to select a WiFi network.
4. Enter the WiFi network's password.
5. The right LED will breathe cyan after the probe connects to the cloud.
6. Rename probes to make identification easier.



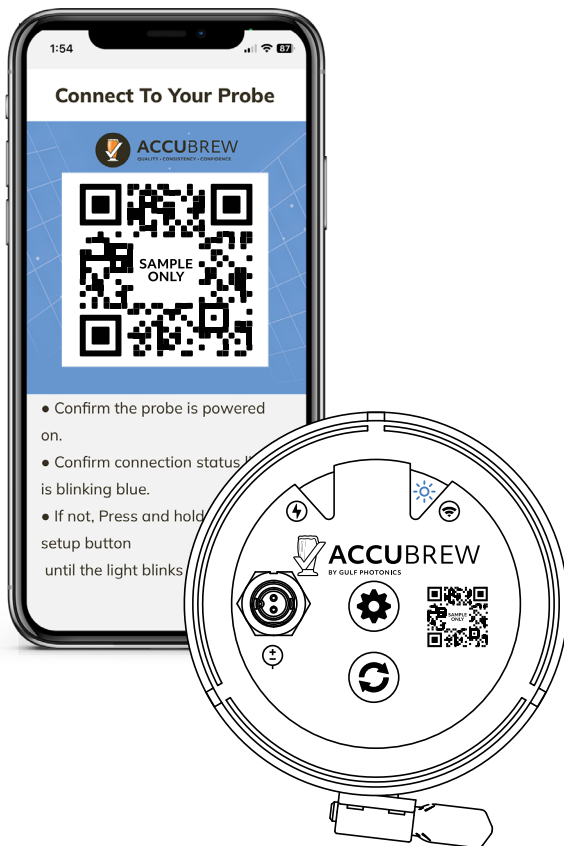


Subscriptions

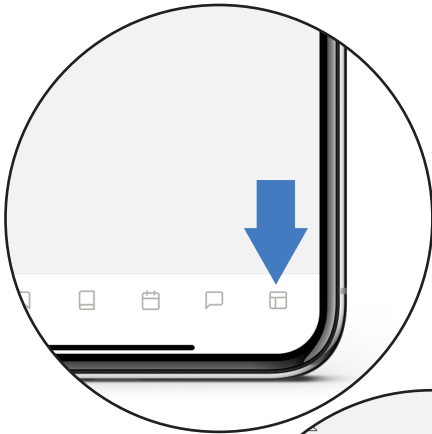


Start your subscriptions to add users and start runs

- 1. Tap the bottom right button on the Dashboard.**
- 2. Select a probe from the dropdown list to assign a subscription**
- 3. Enter billing information to start the subscription.**
- 4. First subscription is \$24.95, each additional subscription is \$9.95.**

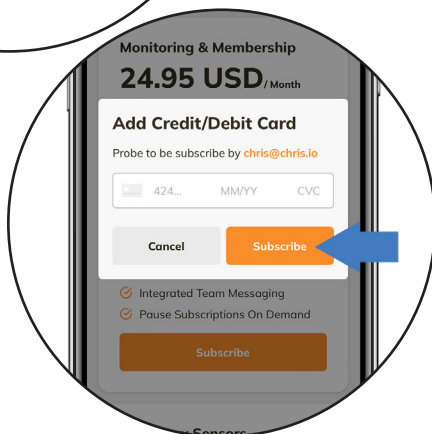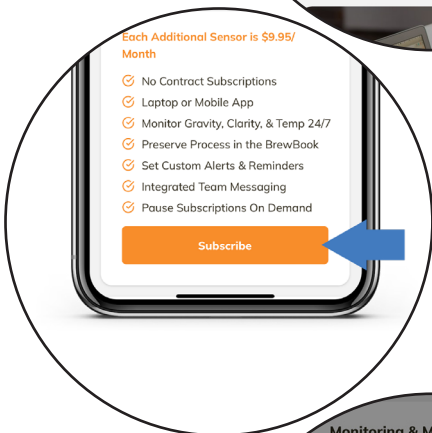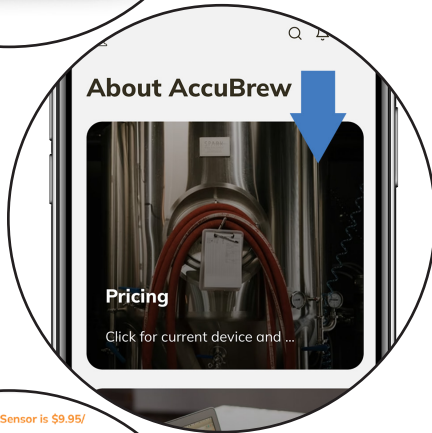


Add Collaborators & Users

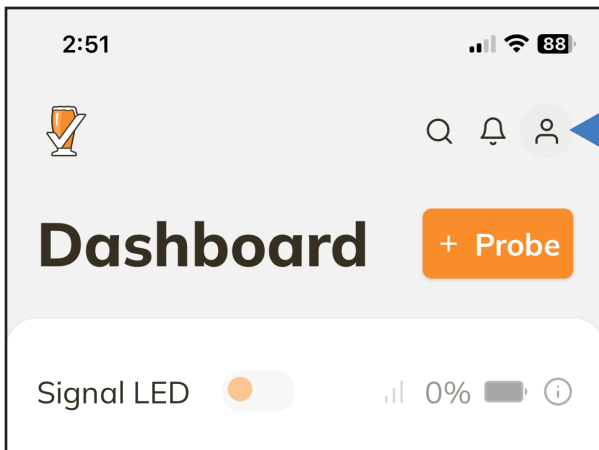


1. Tap the, **Account** symbol top right on the Dashboard.

2. Tap **Account Management**.

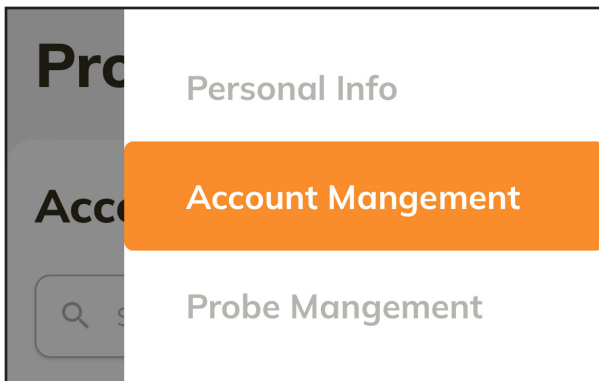

3. Tap the **Plus (+)** symbol to add users.

4. Enter name, email address, country code, phone number, and password for a new user or collaborator.

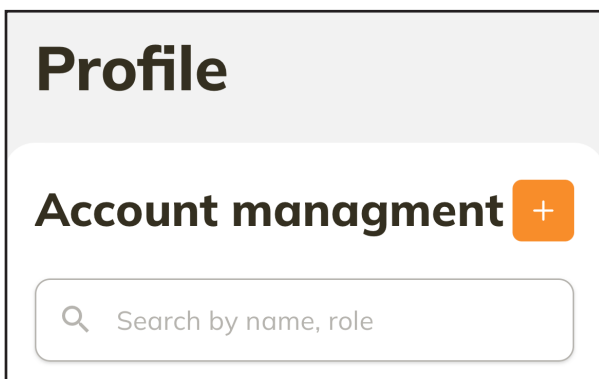

5. Select user **Production** or **Collaborator** to assign privileges.

6. Tap **Create**.



7. Send new users and collaborators their passwords.

Create account	
First Name <input type="text"/>	Password <input type="password"/>
Last Name <input type="text"/>	# of Assigned Batches (0)
Email <input type="text"/>	Role Manager Production Collaborator
	<input type="button" value="Cancel"/> <input type="button" value="Create"/>


Start A Run




1. Remove the black, vinyl protective end cap from the probe and install it through a 1.5" TC port.
2. If only one port is available, install the probe through a short, sanitary T fitting.
3. Tap the **Device Dropdown** in the app, and select a probe from the list.
4. Tap the **Play** symbol.
5. Create a unique name for each batch. We recommend using brand name and batch number.
6. Complete the pre-run survey.
7. Tap **OK** to start the run.

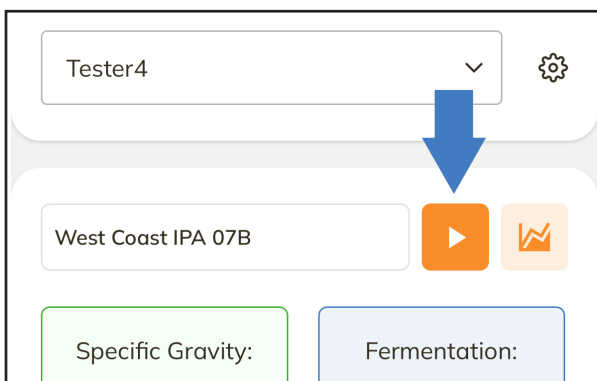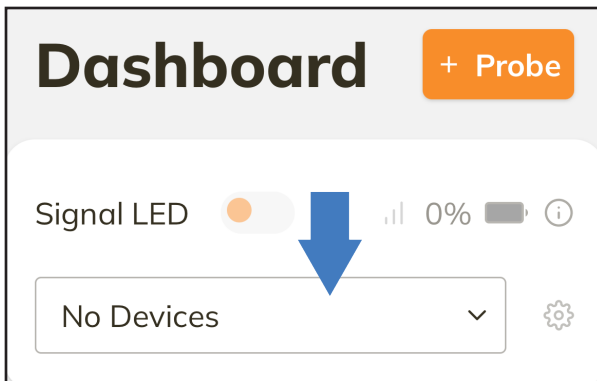


BrewBook

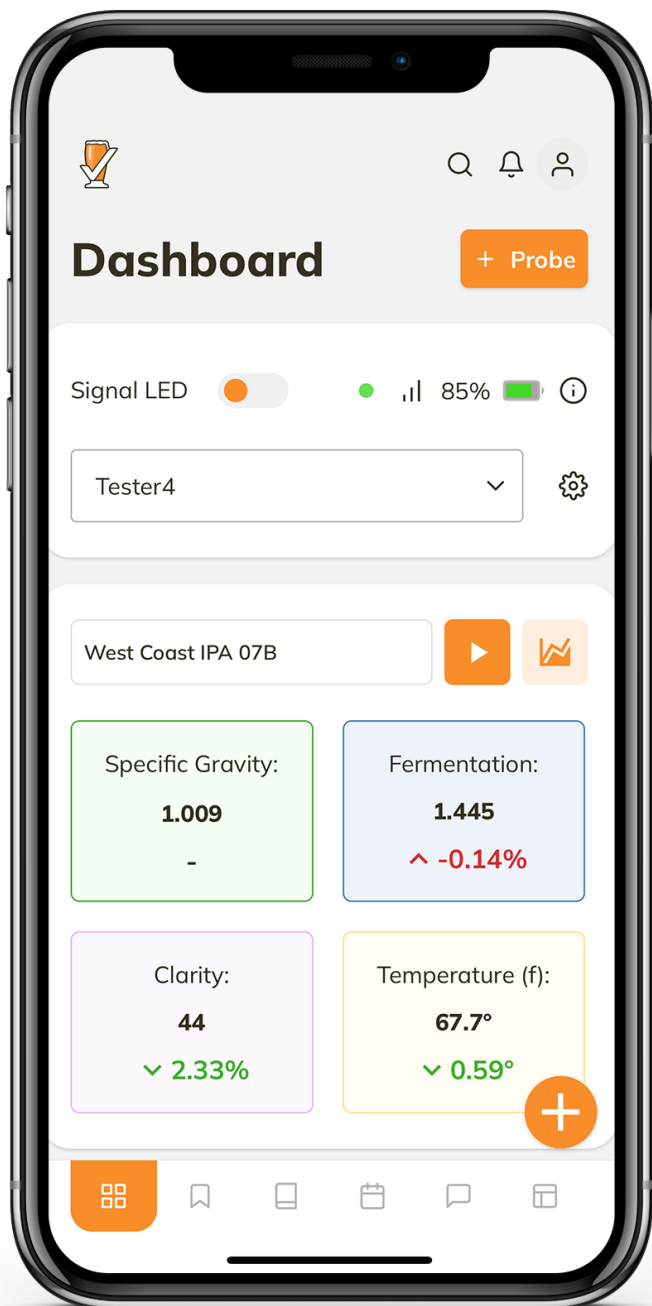

1. Tap the large Plus Symbol (+) at the bottom right to enter BrewBook notes and set reminders.

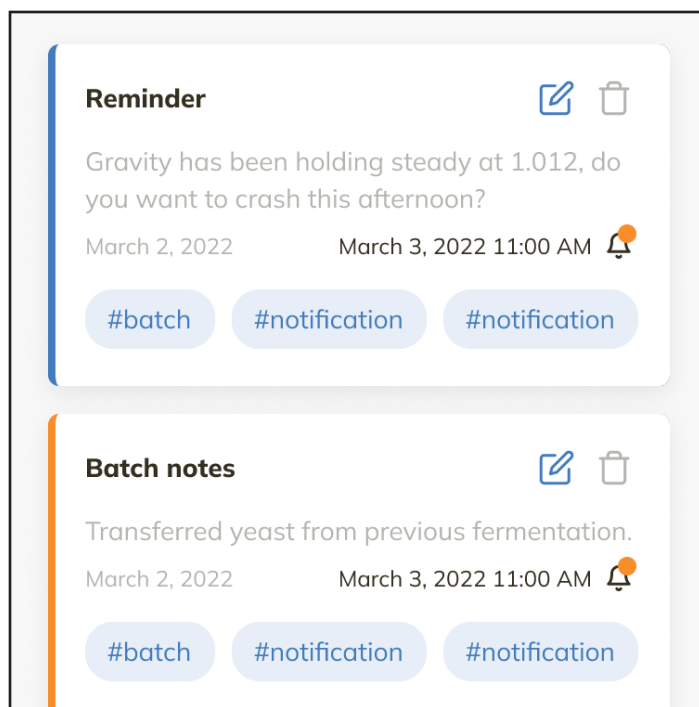

Desktop Version

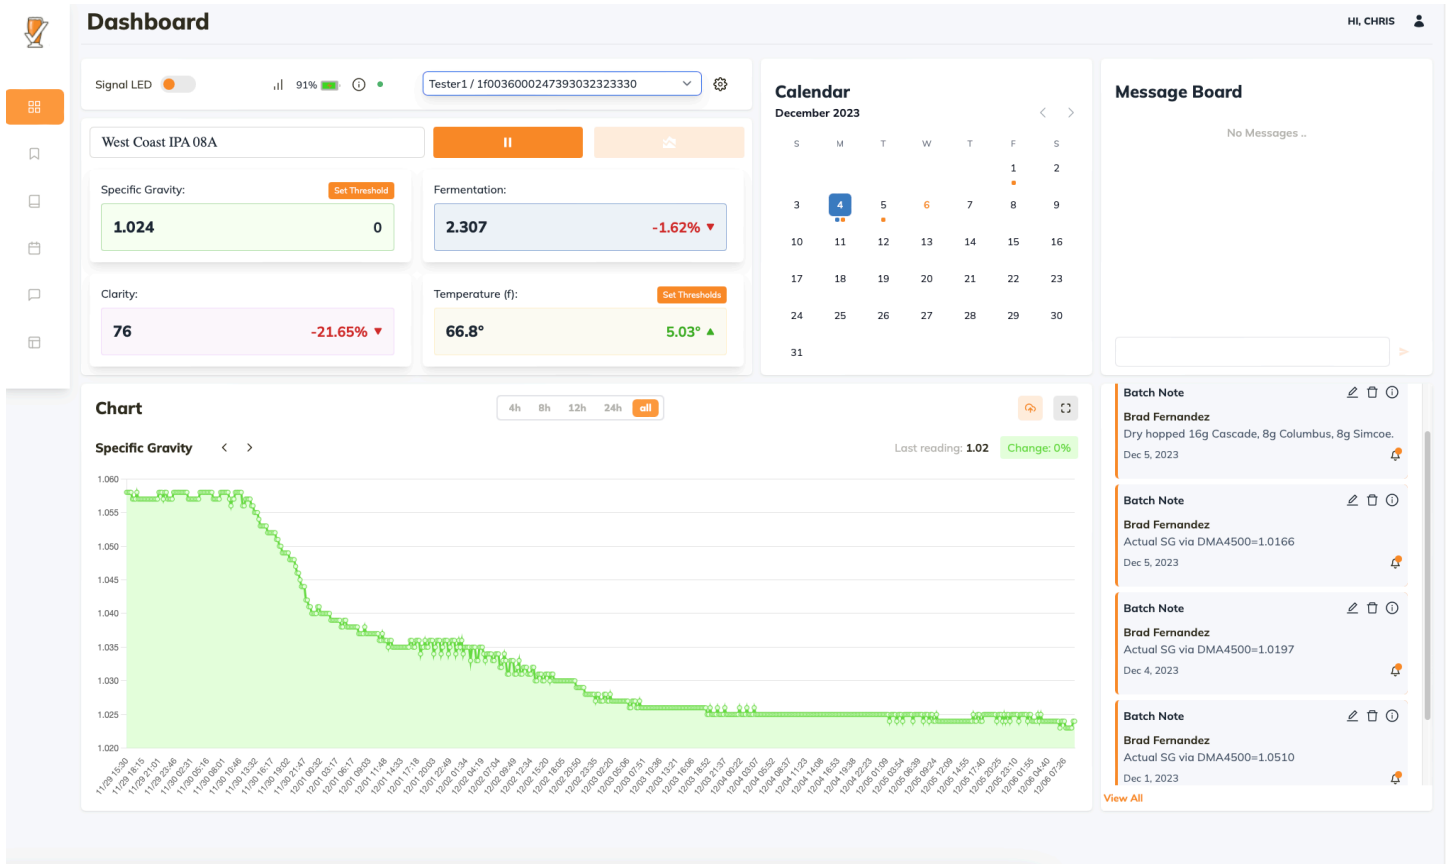

Go to [AccuBrew.io](https://accubrew.io) and sign-in to your account using the same credentials used to create the account to view the **Gravity, Fermentation Activity, Clarity, and Temperature** graphs in a browser.

